



PowerPrompter Flip Screen Instructions for Windows XP

Close all applications.


Right click on an empty area of the desktop and select “Properties”

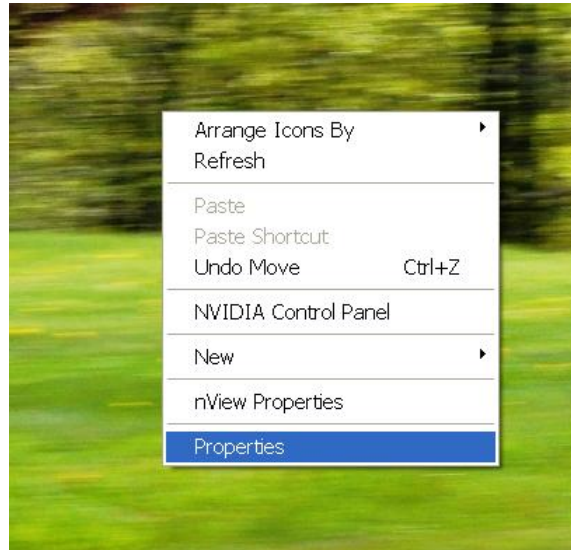


On the Display Properties screen, select “Settings”

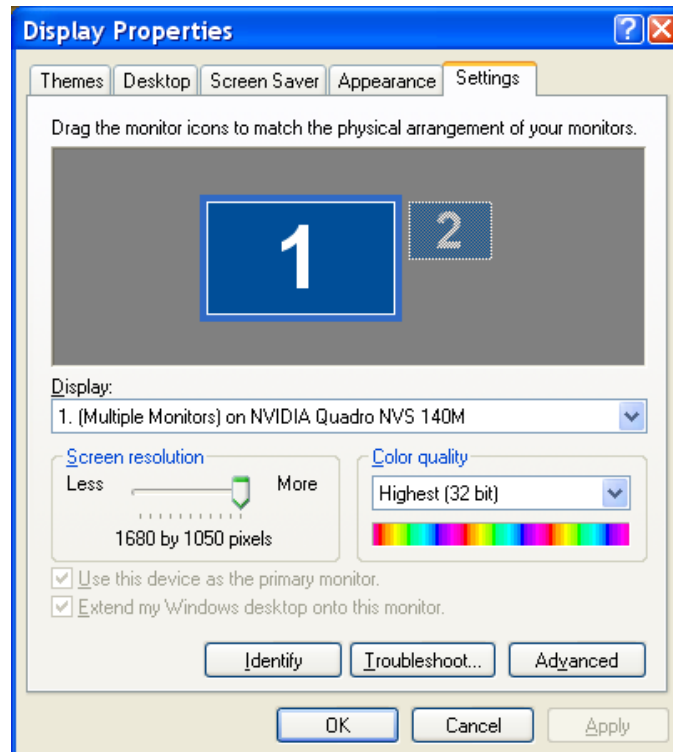

Click on monitor 1 and set the screen resolution to 800x600 and the color quality to 16 bit and then click apply.

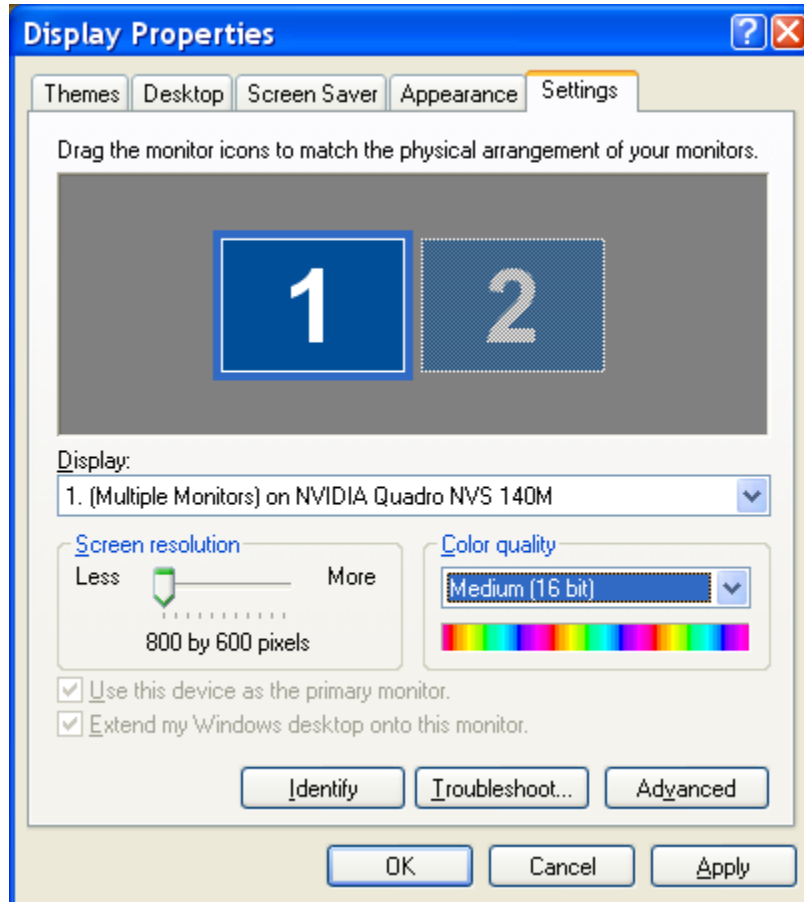

Now click on monitor 2 and select the same settings, 800x600 resolution and 16 bit color. Next, check the box that states “Extend my Windows desktop onto this monitor.”

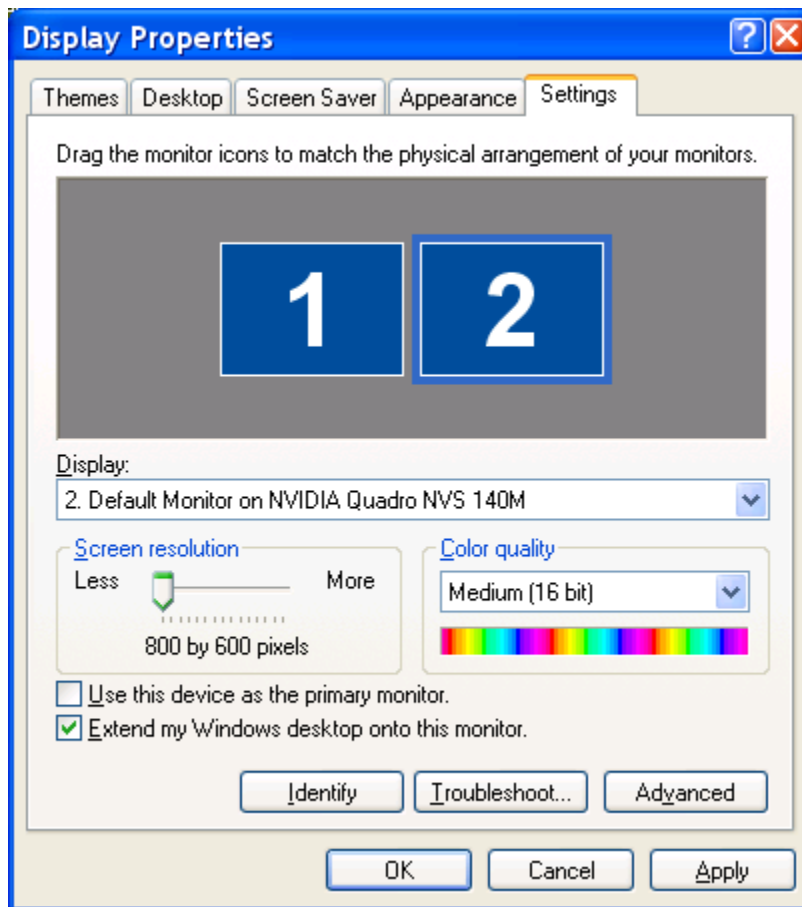

Click apply.

At this time, you will see the prompter monitor flicker and then a blank desktop will appear or an image of your desktop background with no icons.

If you move your mouse to the far right of the laptop screen it will disappear from the laptop screen and appear on the prompter screen.

Click ok to close the Display Properties window.

Open the PowerPrompter software.

From the file menu, select "Secondary Monitor", then either "Mirror" or "Inverted Mirror" depending on your specific monitor configuration. Mirror is the most common.

